 



Assembly Guide

 
E4475 - E4476

Quattro display tower - high

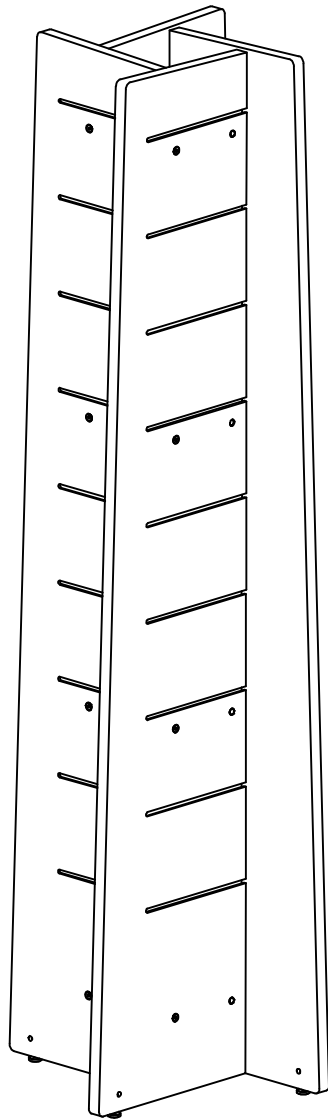


2016.06

First check the contents to make sure that nothing is missing. Sort out the screws and fittings as shown.
Assemble your furniture step by step, as shown in the illustrations.



4 x E445510


4425

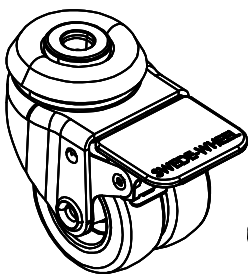


2 x E422511



4 x E422514

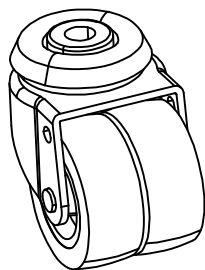


2 x E422512

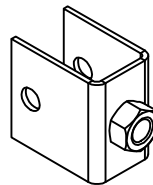


4 x E422510



 4 x E422513




8 x E422412

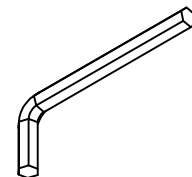

2 x E409505



 4 x E4123




16 x E9050




16 x E9740



 4 x E40418



4 x E40146

 

1 x E33232

