 
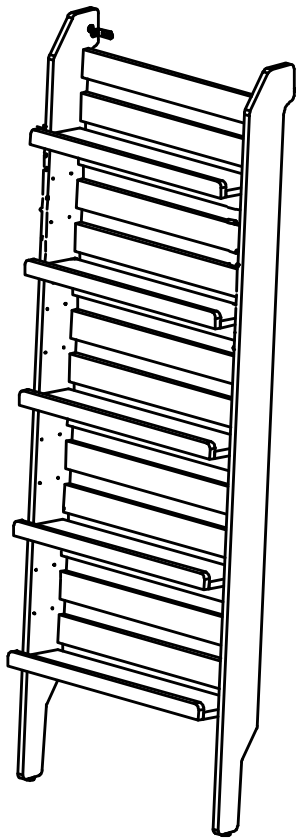 


Assembly Guide

Showalot, single-sided
Showalot, double-sided

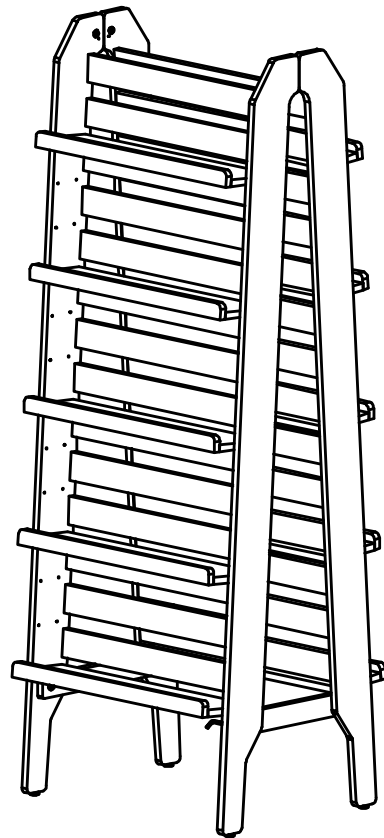

E4466 / E4467
Wall model

 

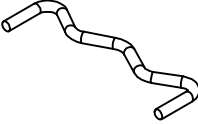 

 







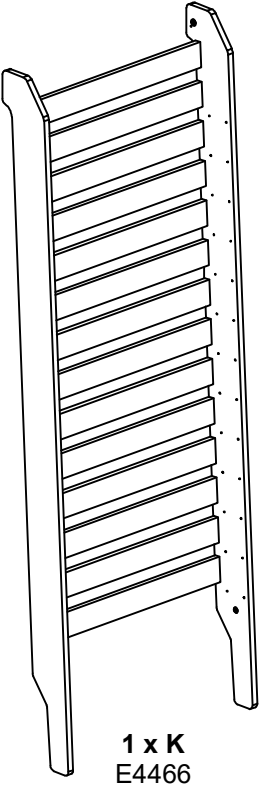 
 
 


E4515 / E4516
Freestanding model

2024.11

First check the contents to make sure that nothing is missing. Sort out the screws and fittings as shown. Assemble your furniture step by step, as shown in the illustrations.


2 x **E4466 / E4467** Wall model = **E4515 / E4516** Freestanding model

 <p>2 x A E40416</p>	 <p>2 x B E40418 (assembled by supplier)</p>	 <p>10 x C E40431</p>	<p>Not used in Freestanding</p>  <p>2 x F E9900027</p>		 <p>2 x E E40425</p>	
<p>Not used in E4466 / E4467 wall model</p>						
 <p>2 x D E40415</p>	 <p>1 x G E9900024</p>	 <p>2 x H E9900025</p>	 <p>2 x I E404110</p>	 <p>2 x O E9900031</p>	 <p>2 x J E9750 (assembled by supplier)</p>	 <p>1 x N E448502</p>
<p>Not used in wall model</p>						
 <p>1 x K E4466</p>		 <p>5 x M E44662</p>			 <p>1 x L E9950066</p>	


Assembly Guide


E4466 / E4467

 
Showalot maxi

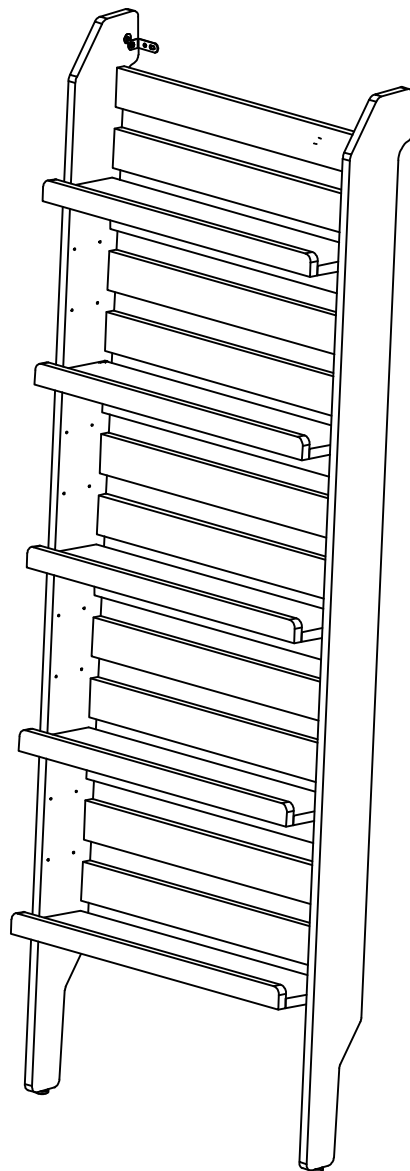

   First check the contents to make sure that nothing is missing. Sort out the screws and fittings as shown.
Assemble your furniture step by step, as shown in the illustrations.

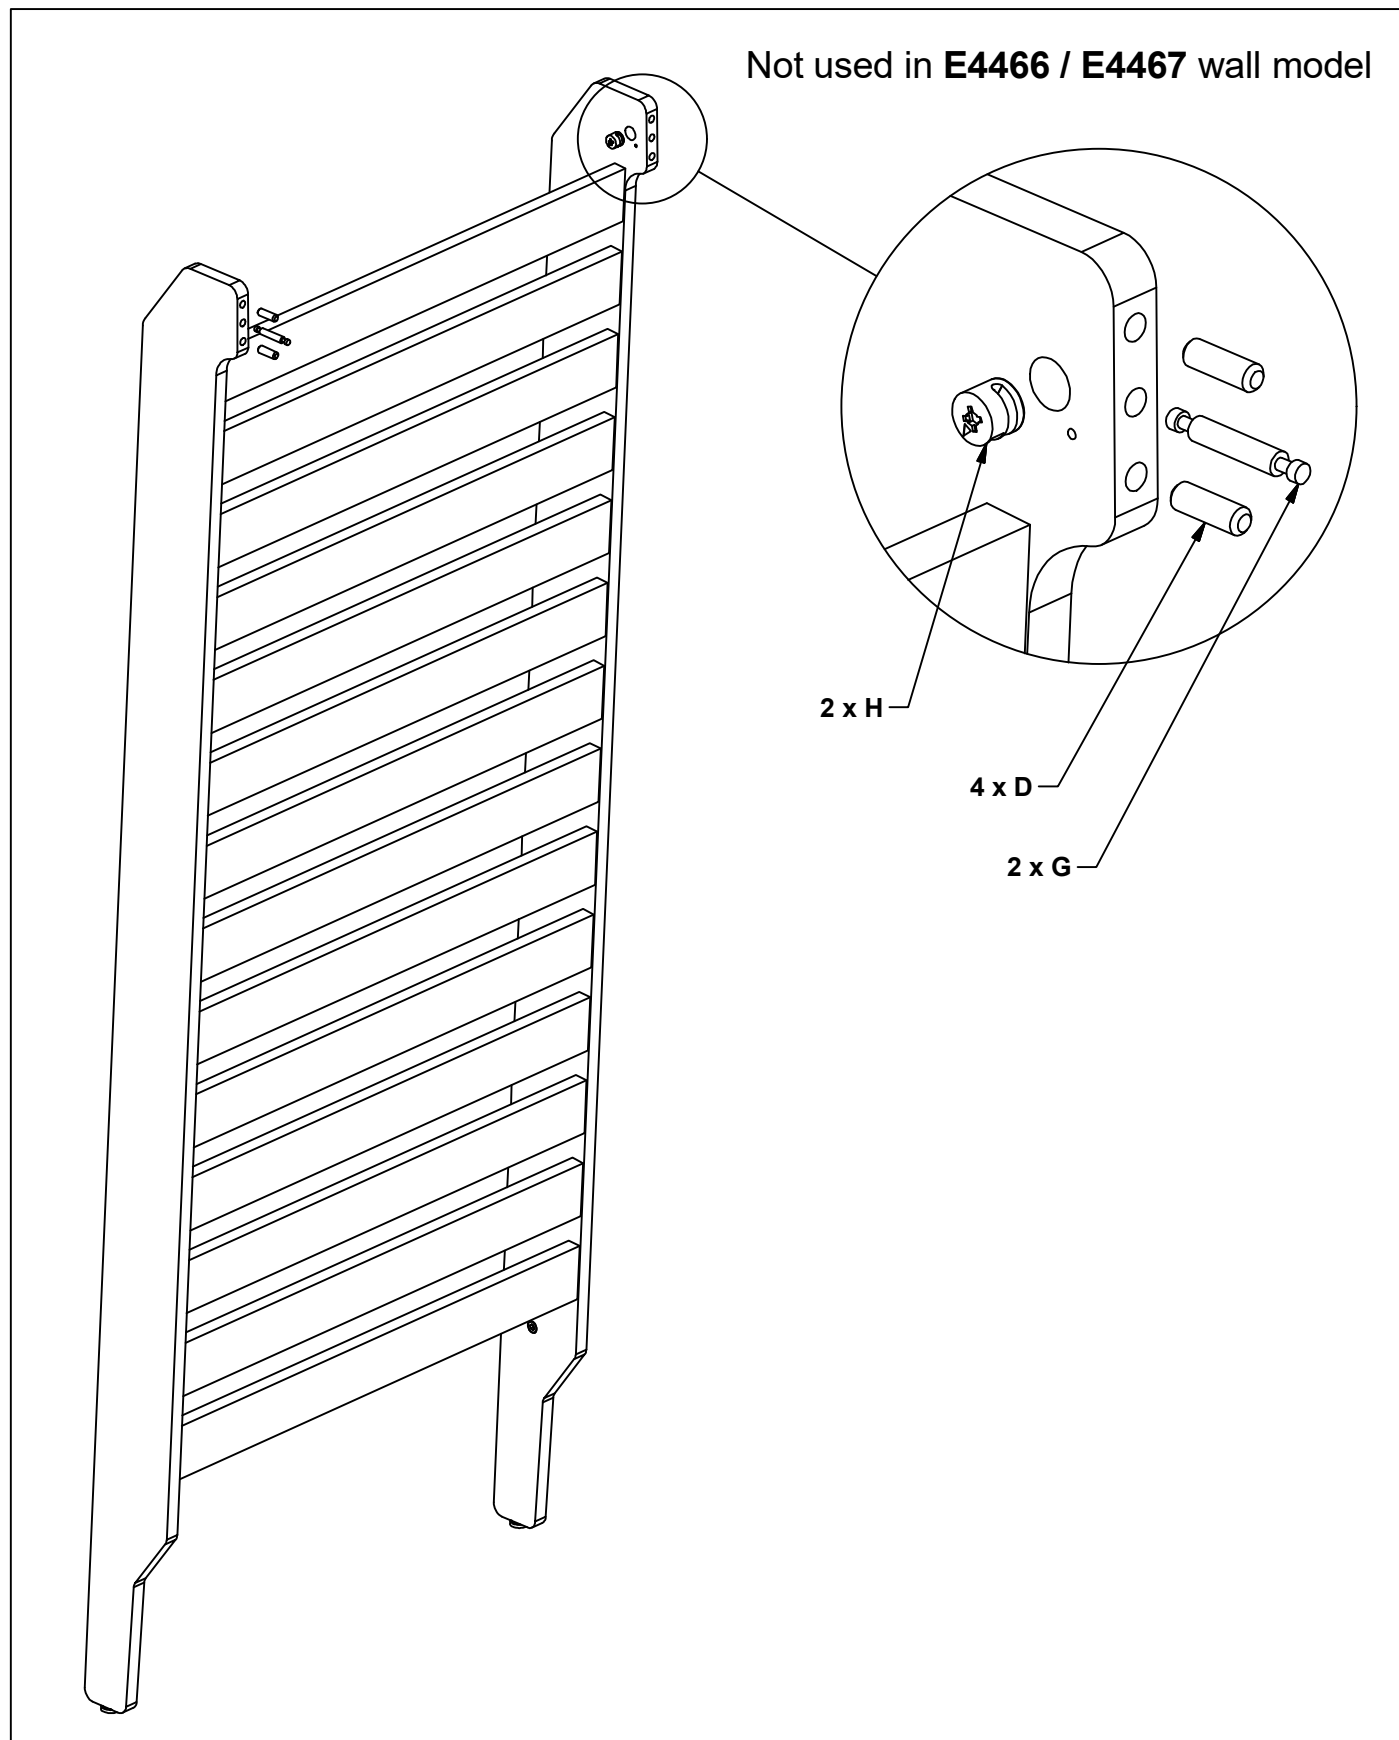

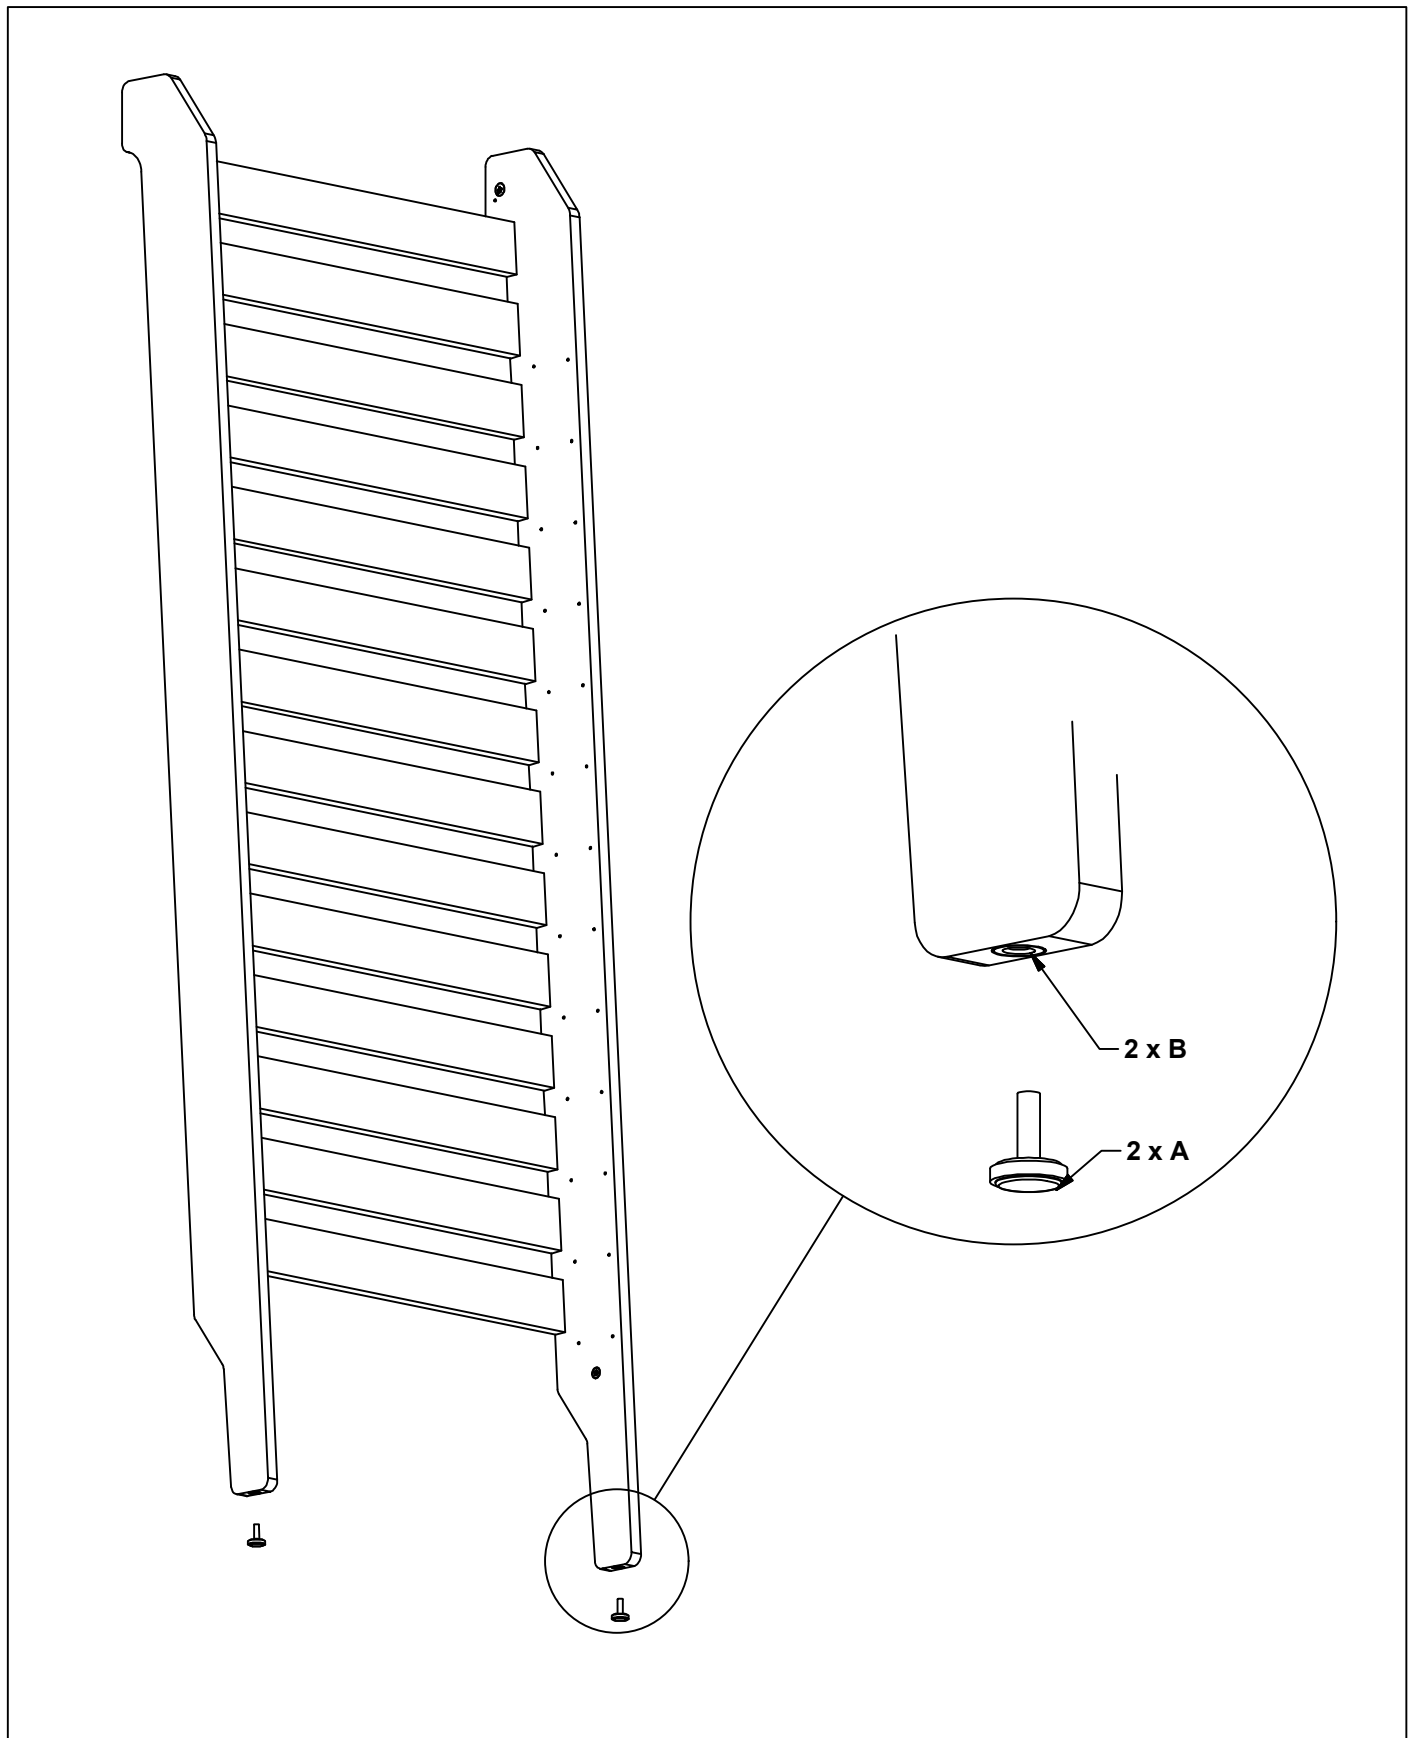


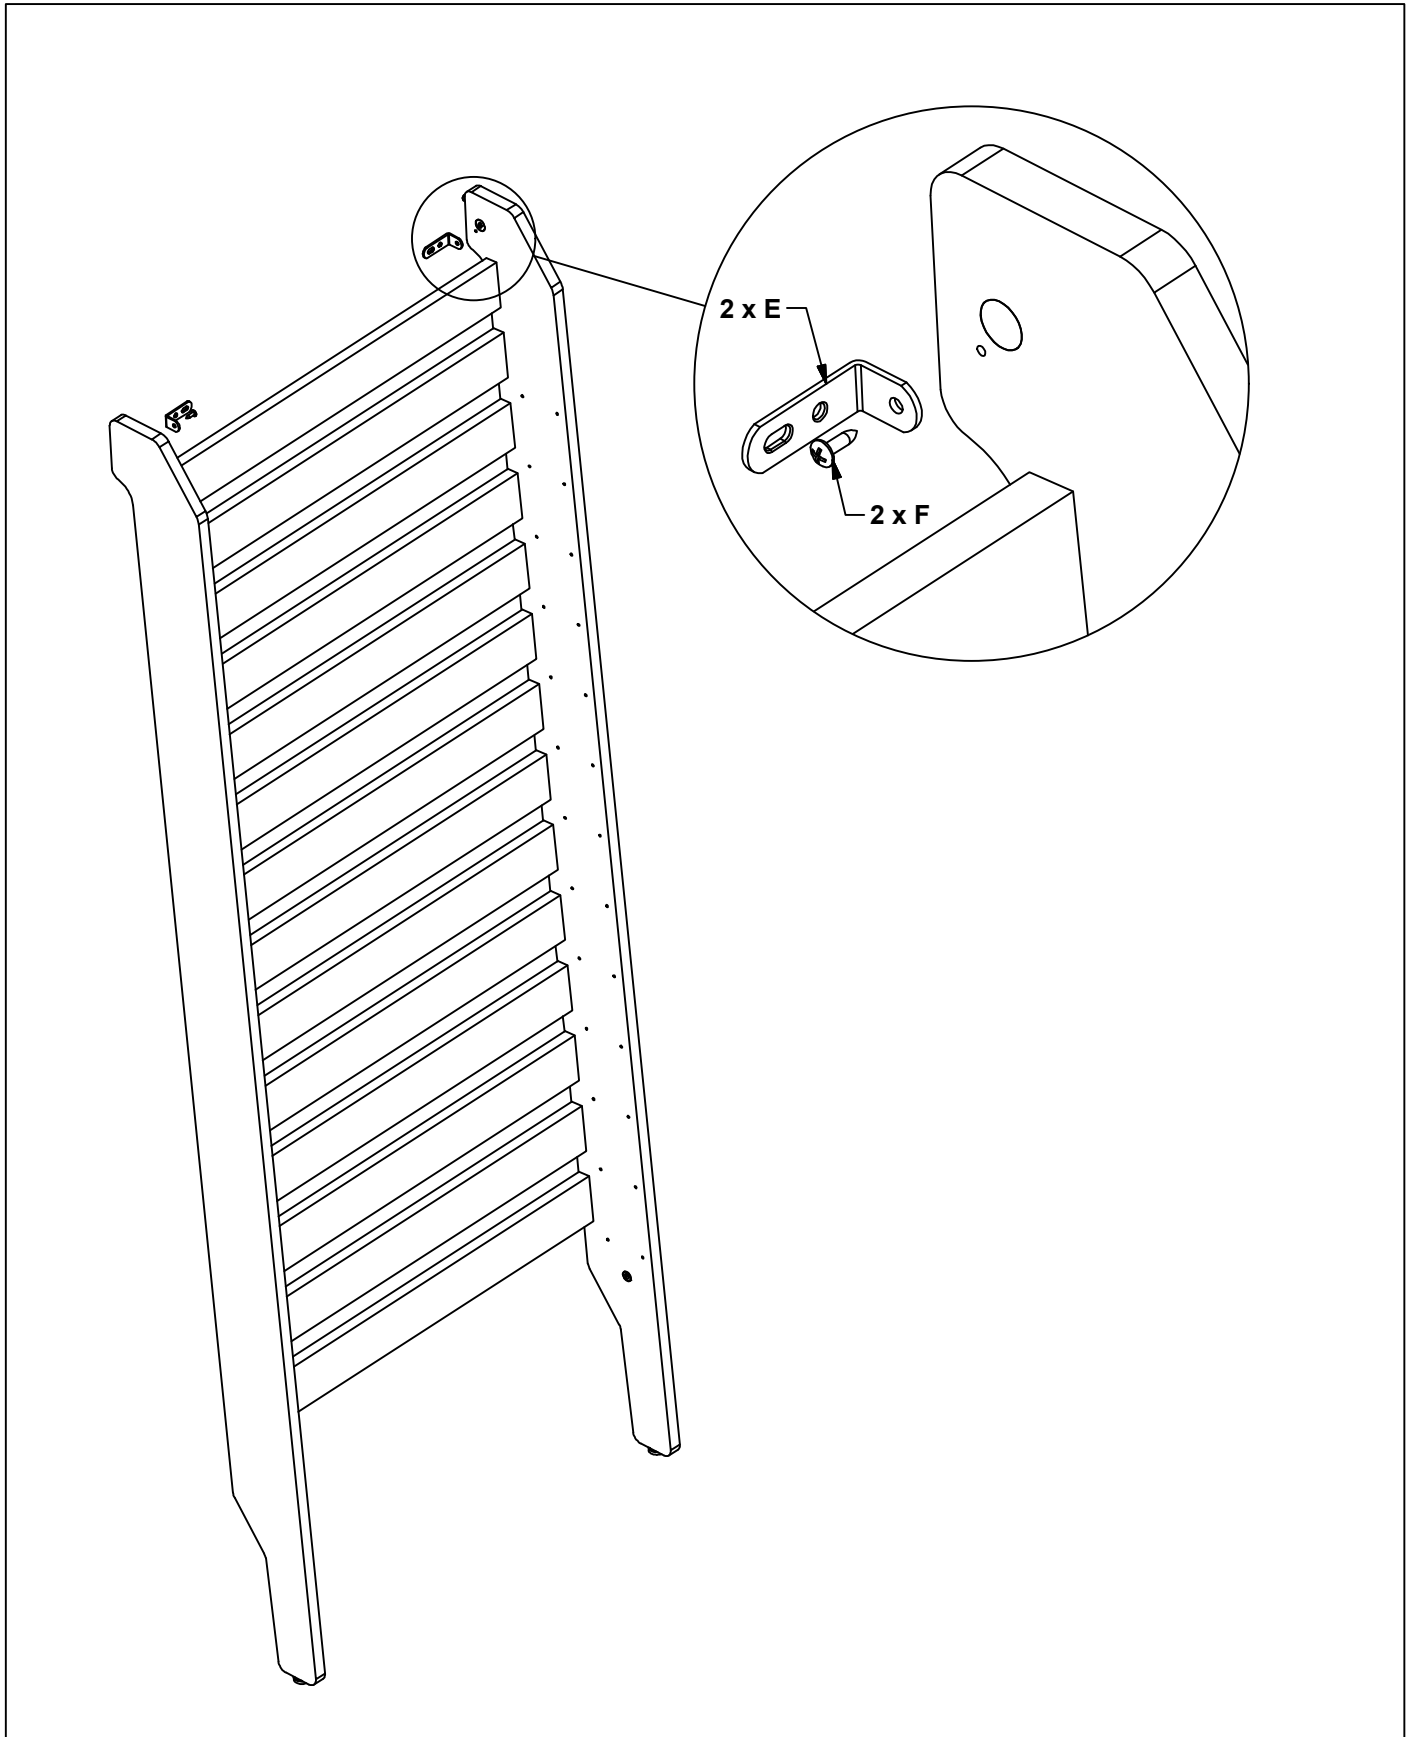

Assembly Guide

E4515 / E4516

 Showalot maxi

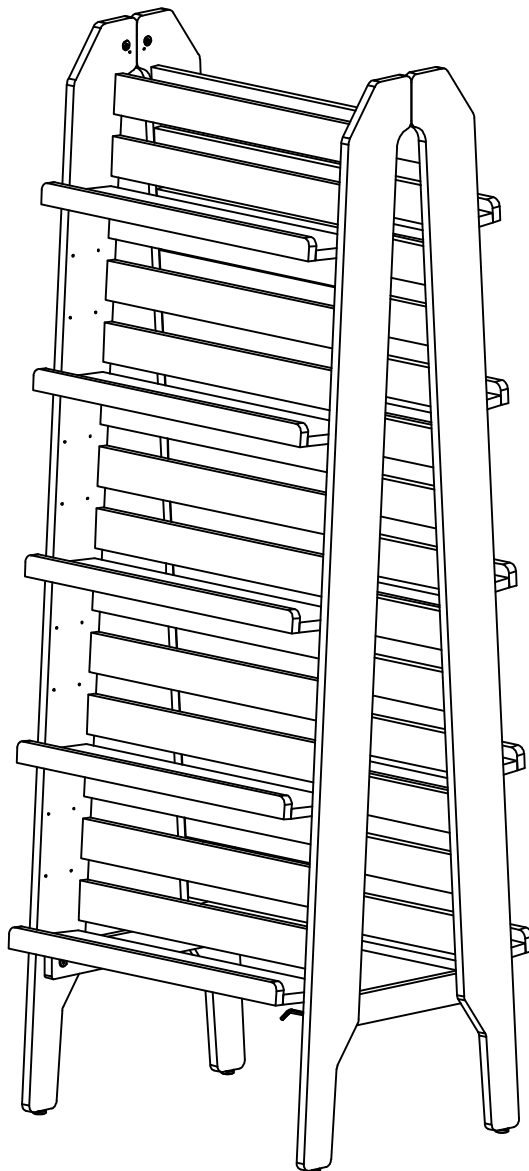

First check the contents to make sure that nothing is missing. Sort out the screws and fittings as shown.
Assemble your furniture step by step, as shown in the illustrations.

